


GALAX

USER MANUAL

SNR-04

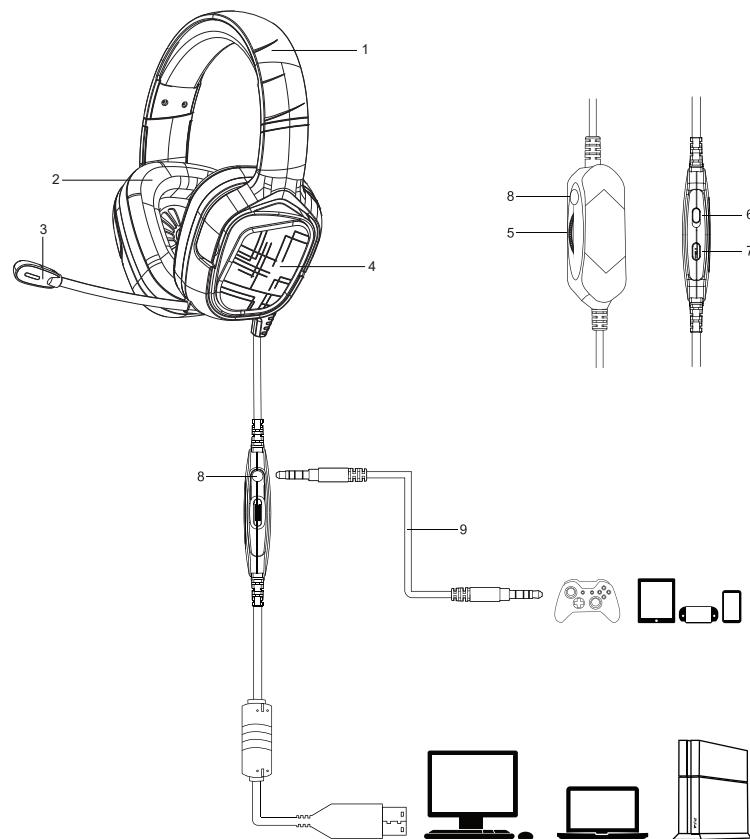

- 1.Headband
- 2.Ear pad
- 3.Microphone
- 4.LED light
- 5.Volume +/-

6. LED light on/off
- 7.Microphone on/off
- 8.3.5mm Jack
- 9.3.5mm audio cable

Technical Parameters

Speaker parameters

Magnet:NdFeB
Size:Φ50MM
Sensitivity: 106dB ±3dB (@ 1KHZ)
Impedance:32Ω±15%
Frequency Range : 20HZ-20KHZ
Rated Power: 20MW
Maximum power:30MW

Microphone parameters

Type:Electret condenser microphone
Size:6.0*2.2mm
Sensitivity: -42dB ±3dB
SNR: 58DB
Output Impedance: ≤2.2KΩ
Directivity: Omnidirectional

Chipset:Cmedia 108B
Size:185*91*216mm
Weight:370g
Plug:USB2.0
Cable length:2.2M

Accessories

3.5mm audio cable:1*1.2M

Instructions

- 1.Using on PC and laptop,insert the plug into USB port directly, then install virtual7.1 software driver.Using on PS4,insert the plug into PS4 USB port directly.
- 2.Using on gamepad of PS4,XBOX,Switch,tablet,mobile phone, please insert 3.5mm audio cable into 3.5mm jack on cable controller first, then connect 3.5mm audio with device's 3.5mm jack.
- 3.Scroll up or down the volume button of cable controller to adjust the volume.
- 4.Push up or down the mic button to turn on or off the mic.
- 5.Press the LED light button to turn on /off the light.